

MULTI PACK MP42 COMBINATION PACKAGING



**EXAMPLES OF
INNER
CONTAINERS**
(sold separately)
Excluding
explosives and
Radioactive
substances

**POLYTHENE
BAG**
Seal with
75mm
adhesive tape

**VERMICULITE
(CODE 38)**
(sold separately)
Completely
fill the
polythene
bag, covering
the product

ASSEMBLY DETAILS:
**FIBREBOARD
BOX: 4GV**
OUTER PACKAGING

CODE 1109
GB/7757

FOR GROUPS: I II III
X Y Z



4GV/X42/S/**

UP TO A
GROSS PACKAGE
WEIGHT OF

42K

MAXIMUM
PERMITTED
WEIGHT OF
CONTENTS

30K

(PRODUCTS & CONTAINERS)

External Dimensions:
616 x 437 x 425mm

Internal Dimensions:
600 x 420 x 400mm


NOTES:
See special packaging details
and other information
overleaf.

Vermiculite is required as
an absorbent filling of all
remaining available space.
See instructions overleaf.


All flaps **must be** sealed twice
in a 'H' tape fashion with
75mm adhesive tape.

** Denotes year of manufacture

Inners, adhesive tape, labels
and vermiculite can be
purchased separately from
Air Sea Containers.

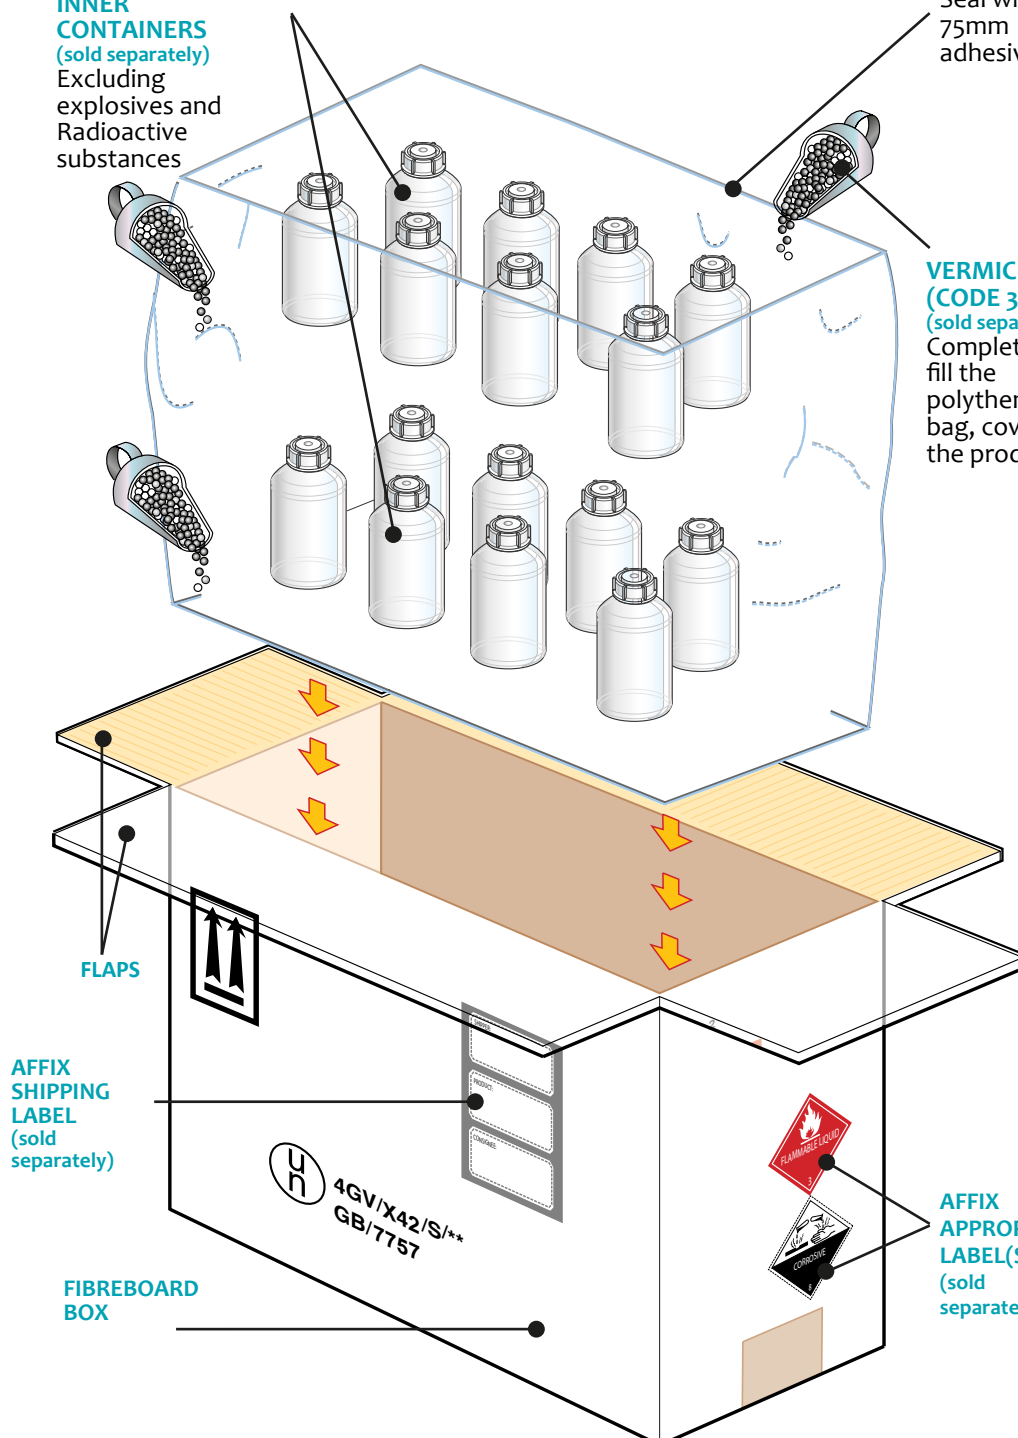

**INDICATION OF
PROPORTION**

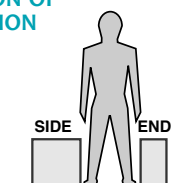

Continued overleaf...

MULTI PACK - MP42 COMBINATION PACKAGING

ASSEMBLY DETAILS: FIBREBOARD BOX: 4GV OUTER PACKAGING

CODE 1109

INSTRUCTIONS FOR USE:


Refer to the illustrations on this page and overleaf.

1. ASSEMBLE BOX BY FOLDING BOTTOM FLAPS FIRST, THEN SEALING TWICE WITH 75MM ADHESIVE TAPE IN A 'H' TAPE FASHION.


2. PLACE PLASTIC BAG INSIDE BOX, ADD 40MM VERMICULITE AT THE BOTTOM, INSERT INNER PACKAGINGS SURROUNDED BY 35MM BREADTH AND 50 MM LENGTH OF VERMICULITE.

3. COMPLETELY FILL ALL REMAINING SPACE IN THE BAG WITH 40 MM VERMICULITE, SEALING THE BAG WITH 75MM ADHESIVE TAPE.


4. CLOSE THE TOP FLAPS OF THE BOX AND SEAL TWICE WITH 75MM ADHESIVE TAPE IN A 'H' TAPE FASHION.

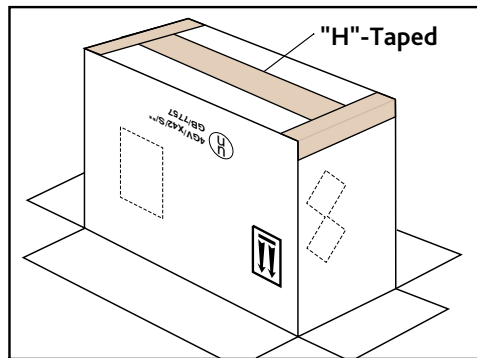


1. ASSEMBLE BOX BY FOLDING BOTTOM FLAPS FIRST, THEN SEAL TWICE WITH 75MM ADHESIVE TAPE IN A 'H' TAPE FASHION.

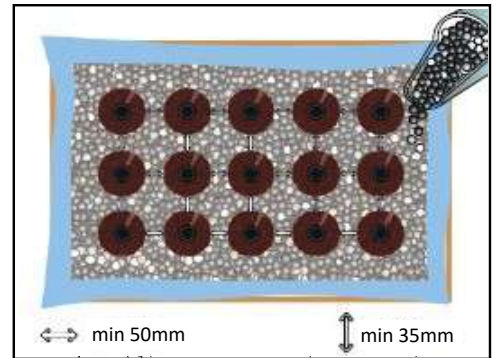

2. PLACE PLASTIC LINER BAG INSIDE BOX, ADD 40MM BASE LAYER OF VERMICULITE, ADD INNER PACKAGINGS SURROUND WITH VERMICULITE IN ALL DIRECTIONS. (SEE INSTRUCTIONS FOR USE) ADD 40MM TOP LAYER OF VERMICULITE.

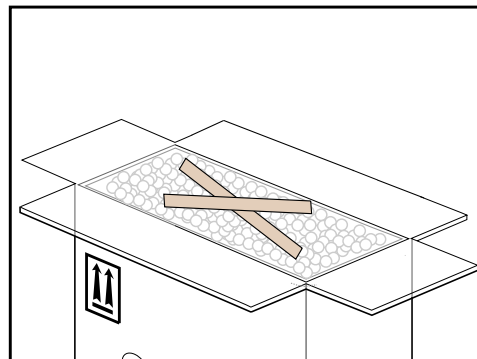

3. SEAL THE BAG WITH 75MM ADHESIVE TAPE.

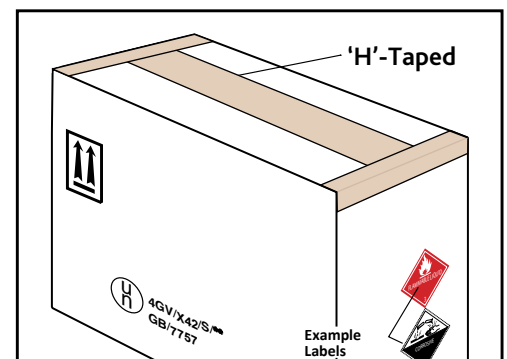

4. CLOSE THE TOP FLAPS OF THE BOX AND SEAL TWICE WITH 75MM ADHESIVE TAPE IN A 'H' TAPE FASHION.

IT IS THE SHIPPERS RESPONSIBILITY TO ENSURE THAT ALL APPROPRIATE REGULATIONS GOVERNING THE TRANSPORTATION OF DANGEROUS GOODS ARE STRICTLY FOLLOWED.

OUR MULTIPACK IS A SPECIAL 4GV OUTER PACKAGING APPROVED UNDER UN TEST CRITERIA, WHICH ALLOWS TRANSPORT OF NON-SPECIFIED INNER CONTAINERS AND THEIR CONTENTS UP TO A STATED MAXIMUM WEIGHT.

IN MULTI PACK- MP42, THE MAXIMUM PERMITTED WEIGHT OF THE INNER CONTAINERS AND THEIR PRODUCT CONTENTS MUST NOT EXCEED 30 KILOGRAMS, WHILST THE GROSS PACKAGE WEIGHT MUST NOT EXCEED 42 KILOGRAMS.

MULTI PACK- MP42 MUST BE ASSEMBLED AND PACKED STRICTLY AS INSTRUCTED TO ENSURE THAT THE PACKAGING IS APPROVED FOR THE TRANSPORTATION OF PACKAGING GROUPS I, II AND III (X, Y, Z) DANGEROUS GOODS.

CLASS 1 EXPLOSIVES OR CLASS 7 RADIOACTIVES MUST NOT BE PACKED IN THIS BOX.

Air Sea Containers Ltd

521 Cavendish Street, Merseyside, CH41 8FZ, UK

▲ Tel +44 (0)151 653 1500 ▲ Email uk@airseadg.com ▲ Visit www.airseadg.com