

Assembly Instructions




CODE 822

ISO-SHIPPER SYSTEM - 30

All Year Winter/ Summer System
+2.0°C to +8.0°C for 48 Hours

Air Sea Containers Ltd, 521 Cavendish Street, Birkenhead, CH41 8FZ
Tel: +44(0) 151 653 1500 Fax: +44(0) 151 653 1515
Website: www.air-sea.co.uk Email: sales@air-sea.co.uk

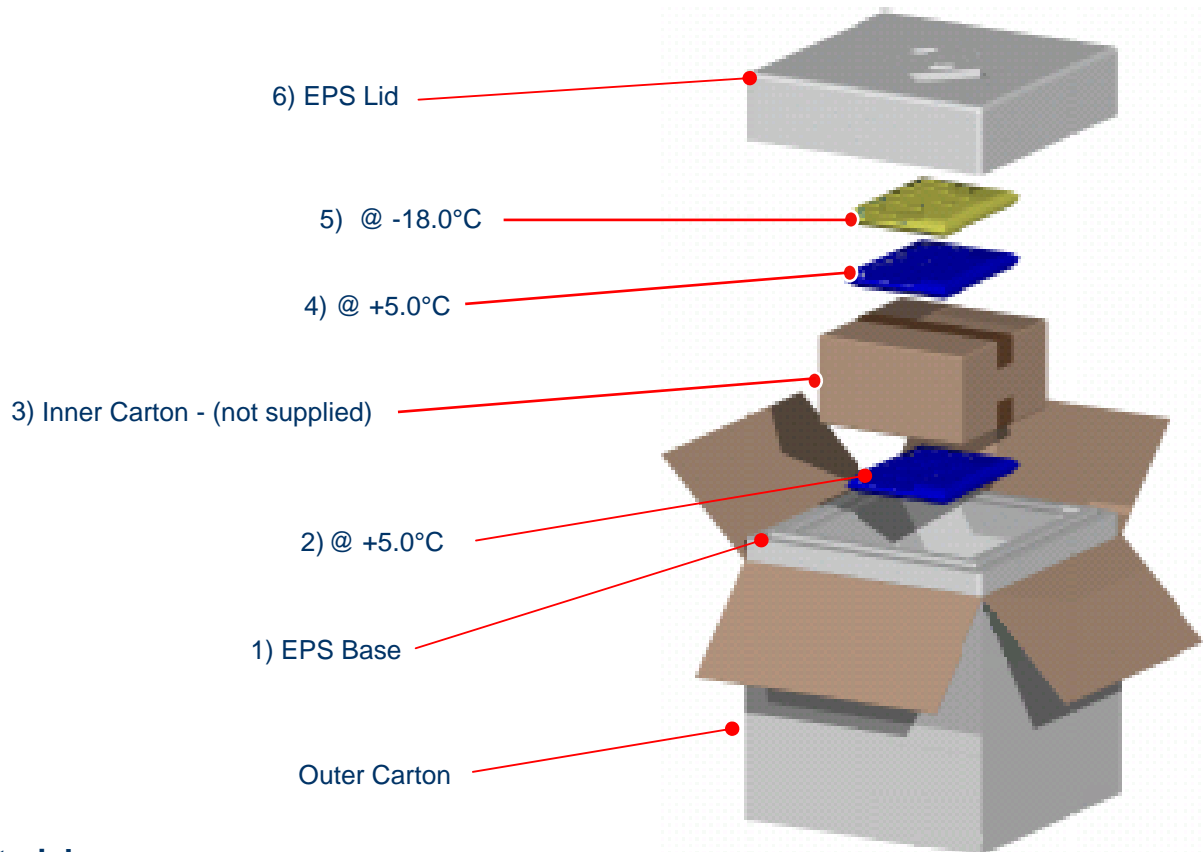

Bill of Materials

1 x TC-30 EPS SHIPPER
1 x Printed Outer Carton
2 x GP2819 Gel Packs @ +5°C
1 x GP2819 Gel Pack @ -18°C
Inner Carton (Not Supplied)

Pre - Assembly Instructions

1 x Gel Pack illustrated YELLOW should be stored @ -18° C in a cold store for a minimum of 48 hours prior to use.

2 x Gel Pack illustrated BLUE should be stored @ +5° C in a cold store for a minimum of 48 hours prior to use.

Assembly Instructions

Once Gel Packs have been stored as indicated in the pre-assembly instructions they can be placed into the shipper.

Gel Packs frozen at -18°C must be removed from the relevant cold store and conditioned at room temperature for 15 minutes prior to packing.

Gel Packs chilled at 5°C can be removed from the relevant cold store and packed into the shipper immediately.

Place Gel Pack around the product as indicated on the diagram.

Fit EPS shipper lid on top and secure outer carton flaps once the Gel Packs and product are assembled.

NB. Gel Packs are supplied in white bags and are illustrated as YELLOW or BLUE for ease of assembly on the diagram only.

Assembly Instructions must be strictly adhered to. Customers are advised to check the appropriateness of this package for their own shipping conditions prior to use.

Performance Summary information available on request